

1.

/var/armax/boxbus/storage - linux
C:/Documents and Settings/All Users/armax/boxbus/storage - windows
printsrv.conf.

PRINTER\printerType=1

(1)

1 100. :

PRINTER\printerType=100

"".

2.

:
ini WORK_WITHOUT_PRINTER=1
ini WORK_WITHOUT_PRINTER_MESSAGE=0
ini WORK_WITH_PRINTER_ERRORS=1